

Sar Major Canvas Goods Camper Trailer Instructions

TOWING

- 1- Ensure that you have a 50^{mm} tow ball on your vehicle and that the trailer is coupled to it correctly
- 2- Check that the trailer lights are working.
- 3- Check that all legs are in the up position and fastened securely. (Bolt should screw through hole in leg)
- 4- Remove Jockey Wheel and store in trailer or vehicle.
- 5- Make sure that Road Cover is on and fastened securely with the 8 straps.

CAMPER ERECTING

- 1- Choose a flat dry area and clear any twigs or sharp stones.
- 2- Move Trailer to desired position, keeping in mind position of door and direction of prevailing weather if any.
- 3- Level trailer using jockey wheel, drop rear legs down and tighten.
- 4- Unclip Road Cover straps and remove cover. (PIC 1)
- 5- Pull canvas off the top of the trailer until hoops want to lift up.
- 6- While one person raises first hoop slightly, another pulls on canvas to raise camper and swing all the hoops out. (PIC 3)
- 7- Now peg the floor out, making sure that it is pegged out square with no wrinkles in the floor.
- 8- If using awning, drag awning off camper roof to allow next step to tension roof fully.
- 9- Next go inside the camper, close door (this will ensure ease of opening and closing after erection) extend the last hoop out as far as it goes. Tighten thumb screw. (PIC 4)
- 10- Camper is now erected, awning can be erected now and walls added if needed.



Pic 1



Pic 2



Pic 3



Pic 4



Pic 5


AWNING ERECTION (if needed)

- 1- Awning should already be off of camper roof.
- 2- Peg down springs approximately 3 metres from camper. (see diagram on page 2)
- 3- Insert upright poles in eyelets and adjust poles to profile of camper.
- 4- Tension guy ropes as needed. (Pic 4) also tension guy rope on opposite side of camper to stop front window being distorted by pull of awning.

ANNEXE ERECTION (if needed)

- 1- Slide draft skirt into rope track on back of trailer and fasten to camper with touch tape.
- 2- Insert two small poles into brackets on trailer (above tailgate).
- 3- Insert two upright poles along camper wall and extend to profile of camper.
- 4- Add spreader bars in between poles (ensure that thumbscrew is pointing away from canvas)
- 5- Zip on walls. Peg corners in the following order A, D, B and the C. then peg down all other D-rings. See next page for illustration.
- 6- Retension all poles and spreaders (Pic 5)

Sar Major Canvas Goods Camper Trailer Instructions

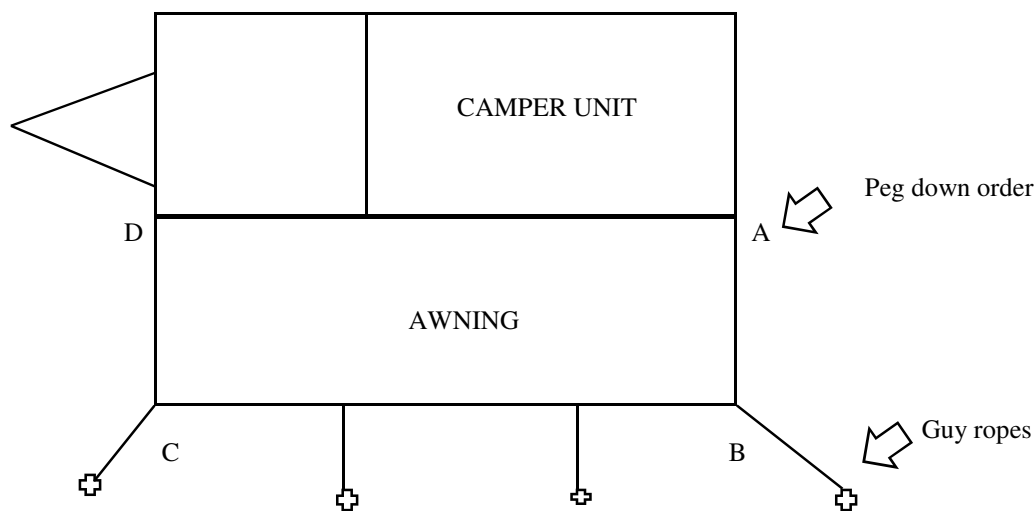

DISMANTLING

- 1- Reverse the erection instructions
- 2- Make sure you slide the rear draft skirt out of track before folding canvas into camper.
- 3- Fold up as neatly as possible when hoops are being lowered. (Note: only the 4th hoop is loosened and pushed in, other 3 hoops are left tight)
- 4- Fit Road Cover to folded canvas with Label at the rear of the trailer. Fasten 8 straps and pull tight.
- 5- Slide rear legs up and bolt securely (make sure that bolt screw into hole at bottom of leg)