



Ken Major Pty Ltd

25 Pinn Street, St Marys SA 5042
ACN 007 634 059

Phone (08) 8276 2411
Fax (08) 8276 3558


ERECTION INSTRUCTIONS ROLL OUT AWNING WALLS (DELUXE)

1. Erect Roll Out Awning as per manufacturer's instructions in conjunction with the next two directions

- (a) Swing support poles down to ground (not clipped to van)

- (b) Before tensioning roof do the following

- (i) ensure that roller is in correct position (empty roller slot should face the van (9 o'clock)) (See Pic 1)

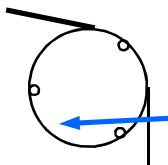

- (ii) slide long wall into empty roller slot, peg down to ground and adjust height of support legs to tension wall


- (iii) after steps (i) and (ii), then tension roof skin

2. Slide half of Anti Flap Kit (AFK) rail (half with the hook) onto top of end walls (ensuring that you have each rail on the correct side of the roof, they are not interchangeable)
3. Slide end wall into track on van starting at the ground and sliding up
4. Attach other half of AFK (half with the spigot) and hook into bracket at top of van (ensure that Clamp Locks on AFK are open), swing up towards roller and extend rail until spigot slides into hole in roller. Adjust tight and then ensure that roof skin is under hinged flaps and close clamps to seal
5. Slide the end walls through the remaining rope track in the AFK commencing from the middle of the AFK and sliding towards the roller. (See Pic 2 and 3)
6. Zip end walls to long wall, fasten touch tape straps around upright pole. (See Pic 4)
7. Press stud Storm Flap to bottom of caravan and peg down to ground
8. Peg end walls down to ground. When pegging wall triangles down, peg will go through the mud flap at the base of the Storm Flap (this will not fray and peg should go into the same hole every time)
9. If on a pop-top attach flaps onto vinyl caravan sleeve using touch tape supplied.
10. Fit Curved Roof Rafter(s) if supplied. (See Pic 5)



correct ✓

incorrect ✗

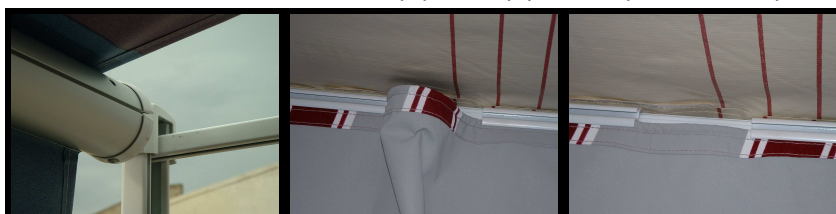

Pic 1

Pic 2

Pic 3



Pic 4



Pic 5