



# Ken Major Pty Ltd

25 Pinn Street, St Marys SA 5042  
ACN 007 634 059

Phone (08) 8276 2411  
Fax (08) 8276 3558

## ERECTION INSTRUCTIONS ROLL OUT AWNING WALLS (STANDARD)

1. Erect Roll Out Awning as per manufacturer's instructions in conjunction with the next two directions


(a) Swing support poles down to ground  
(not clipped to van)

(b) Before tensioning roof do the following

(i) ensure that roller is in correct position (empty roller slot should face the van (9 o'clock)) (See Pic 1)

(ii) slide long wall into empty roller slot, peg down to ground and adjust height of support legs to tension wall


(iii) after steps (i) and (ii), then tension roof skin

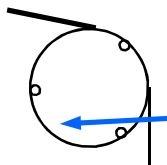


2. Slide pole into pocket at top of end walls (making sure that hook end faces towards van)
3. Slide top of end wall into track on van starting at the ground and sliding up
4. Hook pole into bracket on van and extend pole to slide spigot into hole in roller (thumbscrew should line up with cutout in pocket)
5. Zip end walls to long wall, fasten touch tape straps around upright pole. (See Pic 4)
6. Press stud Storm Flap to bottom of caravan and peg down to ground
7. Peg end walls down to ground. When pegging wall triangles down, peg will go through the mud flap at the base of the Storm Flap (this will not fray and peg should go into the same hole every time)
8. If on a pop-top attach flaps onto vinyl caravan sleeve using touch tape supplied.
9. Fit Curved Roof Rafter(s) if supplied. (See Pic 5)



Pic 1

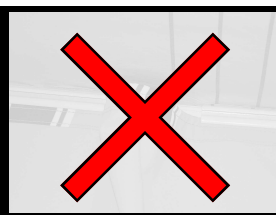

Pic 2

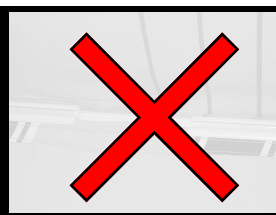

Pic 3



Pic 4



Pic 5