



Ken Major Pty Ltd

25 Pinn Street, St Marys SA 5042
ACN 007 634 059

Phone (08) 8276 2411
Fax (08) 8276 3558


ERECTION INSTRUCTIONS ROLL OUT AWNING WALLS (SUPERDELUXE)

1. Erect Roll Out Awning as per manufacturer's instructions in conjunction with the next two directions

- (a) Swing support poles down to ground (not clipped to van)

- (b) Before tensioning roof do the following

- (i) ensure that roller is in correct position (empty roller slot should face the van (9 o'clock)) (See Pic 1)

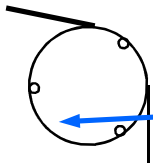

- (ii) slide long wall into empty roller slot, peg down to ground and adjust height of support legs to tension wall

- (iii) after steps (i) and (ii), then tension roof skin




correct ✓

incorrect ✗

2. Slide together the two halves of each Anti Flap Kit (AFK) rail (ensuring that you have each rail on the correct side of the roof, they are not interchangeable)
3. Open clamp locks and hook AFK into bracket on van, swing up towards roller and extend rail until spigot slides into hole in roller. Adjust tight and then ensure that roof skin is under hinged flaps and close clamps to seal
4. Slide the end walls through the rope track in the AFK commencing from the middle of the AFK and sliding both ways. (See Pic 2 and 3) Then slide separate touch tape strip into track and attach wall to strip using touch tape sewn to wall.
5. Zip end walls to long wall, wrap end of long walls around upright pole and fasten tight with touch tape. (See Pic 4)
6. Press stud Storm Flap to bottom of caravan and peg down to ground
7. Peg end walls down to ground. Attach storm flap to end walls by touch tape attached.
8. If on a pop-top attach flaps onto vinyl caravan sleeve using plastic rod supplied.
9. Fit Curved Roof Rafter(s) if supplied. (See Pic 5)



Pic 1

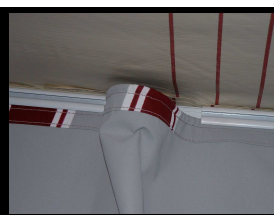

Pic 2



Pic 3



Pic 4



Pic 5